

## Operation and Installation Guide

## USER MANUAL

### SAFETY INSTRUCTION

- Install the equipment in such way that the mains supply plug or the connector of the equipment can be easily reached.
- Do not place the equipment where water can drip or splash onto it.
- Do not place sources of heat, such as ovens, furnaces, or burning candles, etc., and sources of magnetic fields, such as TVs, microwaves, etc.
- Do not block the ventilation slots of the equipment. When installing the equipment, leave some free space around it to provide adequate ventilation.
- Do not clean the equipment with spray cleaners or solvents. Unplug the power supply before clean.



Do not disassemble the equipment freely. Mishandling, alterations or modifications not approved by the professional technician will void the warranty.

 
### GENERAL FEATURES

This Video Door Phone System offers you complete control over the access of visitors to your house. In addition, it allows you to identify the person who calls and provides convenient operation to active the communicate.

1

#### Unlock Selection of Lock 1

##### Option 1:




##### Option 2:




#### Unlock Selection of Lock 2
 
##### Option 1:



##### Option 2:

 

2



### OUTDOOR STATION

  No.	Name	Description
1	LED Assistant	Provide lighting during night time for better visibility
2	Camera	Capture the image to sent to the monitor
3	Speaker	Sound from the monitor is delivered
4	Calling Button	Call the indoor monitor to communicate
5	Microphone	Delivers sound when communication with the indoor monitor
6	Screw Hole	Install the screws
7	Nameplate	Show residential name
8	Wiring Connection	Connect with the monitor
9	Unlock/Setting Indicator	

### Specification

Output Voltage	DC24V
Electric Current	Working:200mA
Camera Lens	1/4, 72° /110°
Definition	720TVL
Illumination	0.05LUX
Talking Duration	120s
Working Temperature	-20 ~ +55° C
IP Rating	55

3

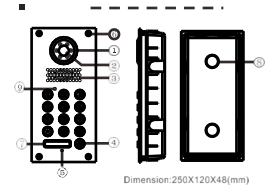


4

### BASIC FUNCTIONS
 
#### Enter into System:

Press "\*" button, two "B!" sound will be heard. Then input 4 digit number admin password (the default password is "1234") and press "F" button enter into system. Now the unlock indicator is flashing.




#### Add Unlock Password:

Press "1" after enter into the system. Two "B!" sound will be heard, then input 2 digit number for position (00-99) and press "F" button. Now another two "B!" sound will be heard, input 4 digit number unlock password and press "F" to confirm. Added successfully after two "B!" sound. It will exit automatically in 10 seconds. Or press "" to exit immediately and three "B!" sound means exit successfully.



 5



#### Delete Unlock Password:

 
Press "2" after enter into the system. Two "B!" sound will be heard, then input 2 digit number for position (00-99) and press "F" button. Deleted successfully after two "B!" sound, press "" to exit and three "B!" sound means exit successfully.



6

#### Delete all Unlock Password:

Press "9" after enter into the system. Two "B!" sound will be heard, then input 4 digit number admin password and press "F" button. Deleted all unlock password successfully after five "B!" sound and exit.



#### Modify Admin Password:

Press "0" after enter into the system. Two "B!" sound will be heard, then input 4 digit number of new admin password and press "F" button. Set successfully after three "B!" sound and exit.

 


7

#### Reset Admin Password:

Keep pressing the unlock button and power on the device. Then hear unlock sounds. This means the system password is back to "1234".


#### A2L-0916TM INSTALLATION DIAGRAM SKETCH

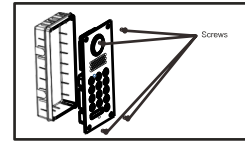

8

### ACCESSORY

 
#### Power Supply: A2L-PK242500-1

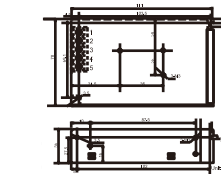

Output Voltage: 24V	Input Voltage:90-240VAC
Output Current:0-2.5A	Input Current:<1.2A, 230VAC
Working Temperature:-10℃~+50℃	Dimensions:111*78*36mm

9

#### Power Connector:A2L-N01

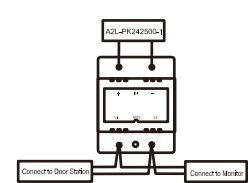 

10